



668 North Coast Highway, #511 • Laguna Beach, CA 92651-4319
Toll Free: (800) ALL-DECK • Tel: (949) 497-4562 • Fax: (949) 497-8493
E-Mail: info@aldeck.com • Internet: www.aldeck.com

DECORATIVE STENCIL APPLICATIONS

The following are examples of what can be achieved utilizing stencils, faux finishing techniques, Confetti Finish, or Splatter Finish in conjunction with the All Deck Coating System. The possibilities are endless, so use your imagination to create your own unique designs!

Shading Techniques

Method 1

Patterns with Multi-Colored Shading

1. Install the full All Deck Coating System in the color you want for the background color (grout/mortar lines). Let dry.
2. Place the stencil pattern of your choice on top of the completed All Deck.
3. All Deck Textured Basecoat is sprayed-on heavier than normal, through the stencil. Immediately knock-down (flatten) with a putty knife for smoother look. Remove stencil. Let dry.
4. Replace the stencil and spray or brush on the Finish Resin in the 2nd color. Let dry.
5. Brush or sponge a third color onto the perimeter of each brick/stone/tile/paver. The third color *is not* applied in the center of each brick/stone/tile/paver. Dab with a brush or damp natural sponge that the water has been squeezed out of to blend color towards the center of each brick/stone/tile/paver.
6. The third color, used for shading or accenting, can be lightly fogged or misted on through the stencil, using a hopper gun set for a fine spray. For greater variety use three or four colors of Finish Resin for shading.

Method 2

Two Color Raised Pattern

1. Install the full All Deck Coating System in the color you want for the background color (grout/mortar lines). But, instead of Rolling or Spraying the Textured Basecoat, trowel it on for a smoother texture. Let dry.
2. Place the stencil pattern of your choice on top of the completed All Deck.

3. Spray All Deck Textured Basecoat through the stencil. Remove the stencil. Let dry.
4. Replace the stencil and either Spray or Brush the Finish Resin through the stencil. Let dry.

Method 3

Two Color Non-Raised Pattern

1. Install the full All Deck Coating System in the color you want for the background color (grout/mortar lines). Let dry.
2. Place the stencil pattern of your choice on top of the completed All Deck.
3. Spray a 2nd color Finish Resin through the stencil.

Method 4

Knock-Down Texture with Shading

1. Install the All Deck Coating System, but do not apply the Finish Resin. Let dry.
2. Apply blobs of All Deck Textured Basecoat, using a putty knife, large spoon, or brush to knock-down (flatten) the blobs. Let dry.
3. Apply the background color of Finish Resin. Let dry.
4. Apply a second color of Finish Resin with a roller; lightly wiping it off immediately, with a damp sponge mop.

Method 5

One Color Pattern

1. Install the All Deck Coating System, but do not apply the Finish Resin. Let dry.
2. Place the stencil pattern of your choice on top of the Textured Basecoat.
3. Apply more All Deck Textured Basecoat through the stencil. Remove the stencil. Let dry.
4. Apply All Deck Finish Resin over the entire surface.

Method 6

Two Color Pattern with Sprayed Shading

1. Install the full All Deck Coating System in the color you want for the background color (grout/mortar lines). Let dry.
2. Place the stencil pattern of your choice on top of the completed All Deck.
3. All Deck Textured Basecoat is sprayed-on through the stencil. Remove stencil. Let dry.

4. Replace the stencil and spray or brush on the Finish Resin in the 2nd color. Let dry.

Method 7

Mexican Paver Pattern

1. Install the full ALL DECK Coating System in the color that will be the background (grout/mortar lines) color. Let dry.
2. Place stencil on top of the completed ALL DECK. (The stencil used in the photograph is SP4 Standard Tile. The 6" tiles were converted into 12" pavers by removing the center section of each tile. However, this is only done when you want to increase the size of the tile/paver/stones otherwise, use as is.)
3. Trowel a thicker than usual application of ALL DECK Textured Basecoat (Spray/Regular Formula Aggregate) through the stencil. Let dry. You can make the Basecoat thicker by using less Basecoat liquid when mixing up the Textured Basecoat material. This application is done in the color you want for the tile/pavers/stones. There may be trowel marks and possibly some surface cracking or crazing. Do not be concerned since this will make the finished surface look more realistic.
4. Leave the stencil in place if you want to spray on the ALL DECK Finish Resin. Remove the stencil if you want to brush on the Finish Resin. Let the Finish Resin dry before adding additional colors.
5. If you want the finished surface to look more natural, you can use two or three colors of ALL DECK Finish Resin. Intermixing the colors of Finish Resin will provide additional tone variation. The uniformity of color is a matter of personal preference.
6. Faux finishing techniques can be used to create additional custom effects with the Finish Resin. Use a damp, but not dripping wet, sponge. Dip the sponge into black or white Finish Resin. Sponge the color onto the tiles/pavers/stones. Next, wipe off the Finish Resin with a rag or newspaper. When using more than one color, sponge each color on individually. Let each color dry before sponging on the next color. Any combination of colors can be sponged onto the tiles/pavers/stones.

Note:

- Use a 4" - 6" trowel, putty knife, or wall board taping knife for trowel or knock-down application.
- For more information or additional design suggestions, contact our customer service desk.

Decorative Applications

STANDARD
APPLICATION



METHOD 1
SHADING
TECHNIQUES




METHOD 2



METHOD 3



METHOD 4

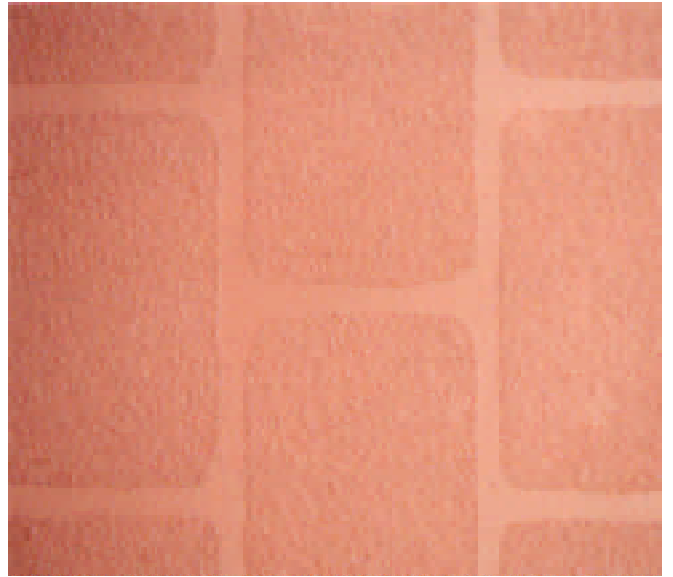

METHOD 5

METHOD 6



